



Excavation Flow by NATM(Dozer type Road Header)

Excavation cycle (advance = 1m)


1.Right Side Excavation

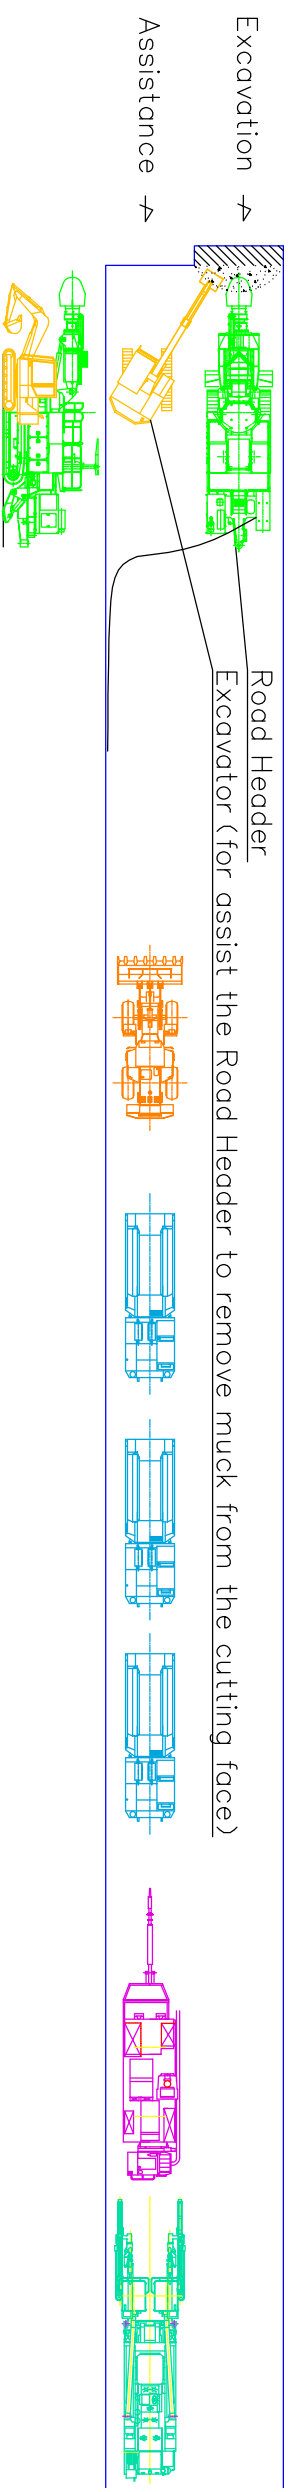

2.Left side excavation, right side muck loading

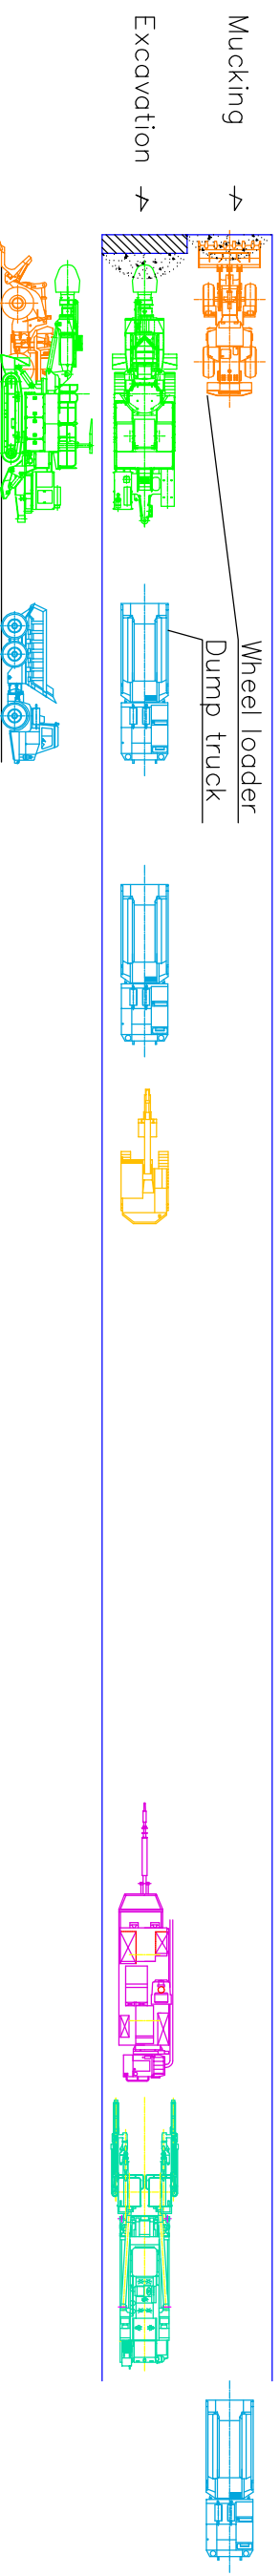


3.Left side muck loading

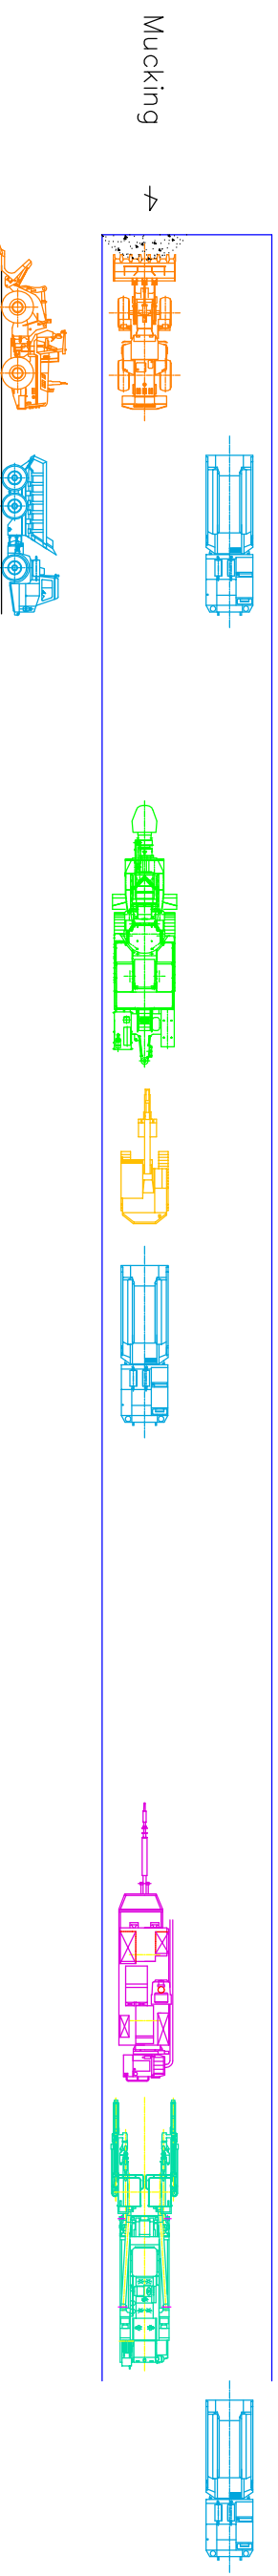

Supporting cycle (every 2~4m advance)

4.Shotcreting

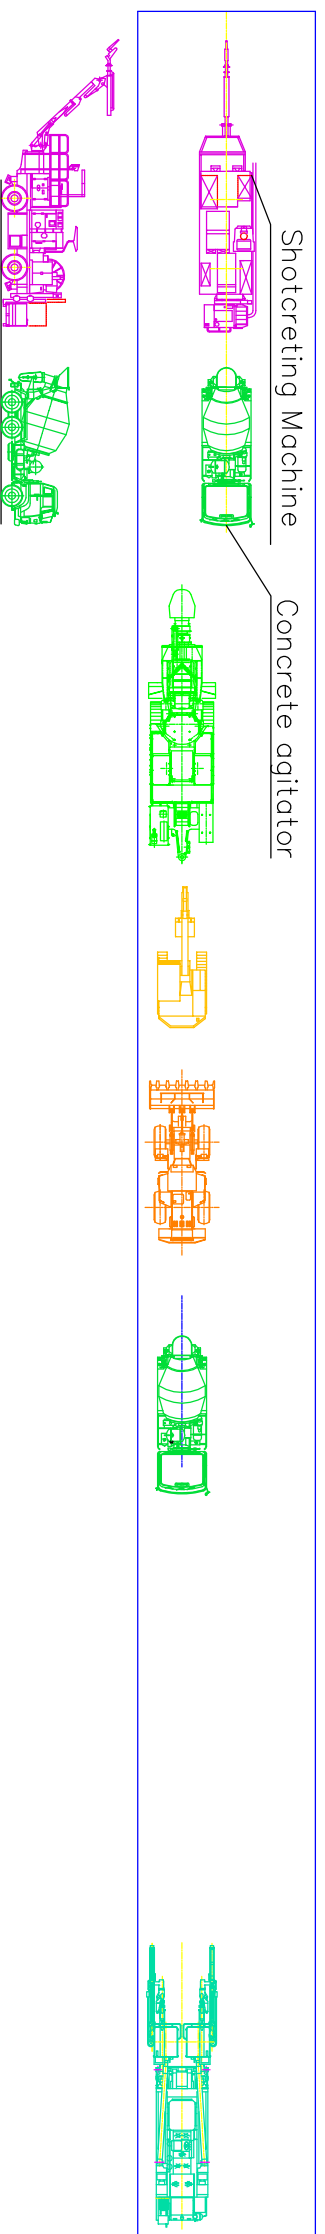

5.Rock Bolting

